

# Loading Dock Safety Gate



# **Installation Instructions/Operation and Maintenance Manual**

**Patent Pending** 

### Models:

LDSG-120-PCY LDSG-144-PCY

**Table of Contents:** 

\*Refer to page 15 for required size dimensions.



Safety Precautions	2
Product Information	
Installation Instructions	4
Disassembling of Gate	12
Operation	
Replacement Parts List	14
Size Reference Drawing	

# **Contact Information**

### Mail

PS Safety Access 1150 South 48th Street Grand Forks, ND 58201

# **Local Phone** 701.746.4519

**Toll Free Phone** 877.446.1519

### Website

pssafetyaccess.com

### Email

4psinfo@psindustries.com

**Hours of Operation** 

8 A.M. to 5 P.M. CT Monday – Friday

### **IMPORTANT!** Read entire Instruction and Operations Manual to become familiar with the product.

**NOTICE** This product is a fall protection product. The effectiveness of the product is directly related to the proper installation and operation of this product. Failure to properly maintain this product **will** affect performance.

### **Publication Notice**

This manual has been compiled and published covering the latest product descriptions and specifications.

The contents of this manual and the specifications of this product are subject to change without notice.

PS Safety Access™ reserves the right to make changes without notice in the specifications and materials contained herein and shall not be responsible for any damages (including consequential) caused by reliance on the materials presented, including but not limited to typographical and other errors relating to the publication.

PS Safety Access and/or its respective suppliers may make improvements and/or changes in the product(s)/service(s) offered and/or the program(s) at any time without notice.

Retain this manual for future reference.

If you would like to download a copy of this manual, please go to pssafetyaccess.com

Product registration is an essential step to protecting your product, register Online at psindustries.com/contact/register-your-product/



# **Safety Precautions**

The following icons are used throughout this Manual.

**A DANGER** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

A WARNING Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

**A CAUTION** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderated injury.

**NOTICE** Indicates manufacturer's statement of additional information.

**IMPORTANT!** Indicates a required action.

**CRITICAL** Indicates a vital component to product performance.

# **Product Information**

**NOTICE** Unauthorized modification of or to the Product voids this Limited Warranty. Authorized modifications, received in writing from PS Industries® Incorporated, as long as the modification is accomplished in strict accordance with PS Industries' instructions, does not void warranty. If this product is modified or altered without manufactures permission, manufacturer is no longer responsible for the product design, engineering, or performance and owner assumes all responsibility. To request product modifications contact PS Industries Incorporated, 1150 S. 48th Street, Grand Forks, ND 58201, phone 877-446-1519, email: 4psinfo@psindustries.com

### I. General Information

- A. This manual contains information regarding installation, operation, and maintenance of the PS Safety Access' Loading Dock Safety Gate.
- B. PS Safety Access recommends that the owner implement a regular preventative maintenance program to inspect and maintain the Loading Dock Safety Gate at a minimum, in accordance with the recommendations in this manual.

### **II. Operation Guidelines**

- A. The Loading Dock Safety Gate is designed to meet OSHA Railing Standard 1910.29(b).
- B. Operation in a manner other than intended could result in damage or less than acceptable performance at time of need, for which the manufacturer will not be held responsible.
- C. The LDSG-120-PCY is adjustable from a minimum of 108" to a maximum 132" clear opening. The Gate will fit 96", 108", and 120" doors, based on a 6" offset per side.
- D. The LDSG-144-PCY is adjustable from a minimum of 132" to a maximum 156" clear opening. The Gate will fit 120", 132", and 144" doors, based on a 6" offset per side.

### **III. Safety Precautions**

- A. Ensure opening is clear of all obstructions through the entire proposed travel of the Loading Dock Safety Gate during operation.
- B. Comply with all OSHA and ANSI Safety Regulations and/or company safety policies when installing.
- ▲ DANGER Ensure area below installation is blocked off from personnel during installation, and mounting surface is capable of supporting all loading. Structural analysis of mounting surface is the responsibility of the owner.

**IMPORTANT!** Verification of the structural sufficiency of supplied anchors based on site specific conditions and the existing structure is the responsibility of the installer/customer. Refer to the anchor manufacturer's installation instructions for installation requirements.

# IV. Storage Prior to Installation of Product

A. Store materials in a dry, ventilated location. If outdoor storage is required, block materials and tarp in a tent-like arrangement, elevated above the product with open sides to allow airflow.

### **V. Installation Site Preparation**

**NOTICE** Before starting site preparation and installation of the Loading Dock Safety Gate, read the entire Operation and Maintenance Manual and review all installation instructions thoroughly.

QTY

1

1

1

# **Product Information**

A. Clear work area of any debris.


4. One (1) Rubber Mallet

5. One (1) Tape Measure

- B. Ensure you have the necessary tools available.
- C. Obtain all required permits.
- D. Personnel: Determine the appropriate number of personnel required to perform installation and have them readily available at the project site. (1-2 people recommended)
- E. Ensure all installation personnel utilize appropriate fall protection equipment and procedures during installation.

**NOTE:** Review inventory to ensure all parts are present for assembly/installation. Refer to part list below.

### **Loading Dock Safety Gate Part List Recommended Tools:** 1. Two (2) $^9/_{16}$ " Socket and Ratchets 2. Two (2) $^7/_{16}$ " Socket and Ratchets 3. One (1) Heavy-duty Flathead Screwdriver (As shipped) ITEM# **DESCRIPTION** 1 LDSG;GATE POST

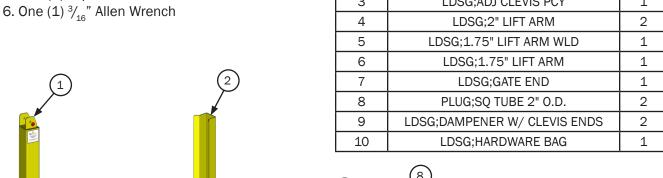


2

3

LDSG;GATE CATCH

LDSG;ADJ CLEVIS PCY

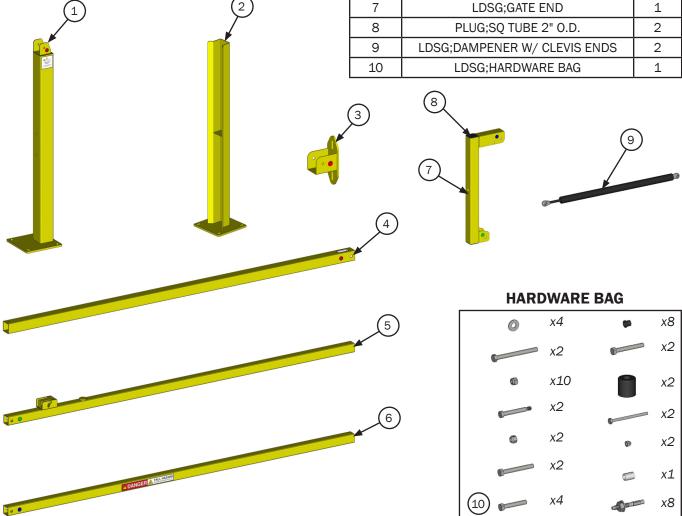


# VI. Loading Dock Safety Gate Installation

**NOTICE** Colored circle decals are provided for easier installation, remove once install is complete. Refer to parts list on Page 3 for item numbers and descriptions.

**NOTICE** Base plates are slotted to allow adjustment for alignment.

- **STEP 1.** Mark holes for the Gate Post (red decal) and anchor with concrete floor anchors.
  - a. Measure and mark the center of the wall opening, using the Gate Size Reference Table to assist in centering the gate on the wall opening. (Gate Size Reference Drawing on Page 15).

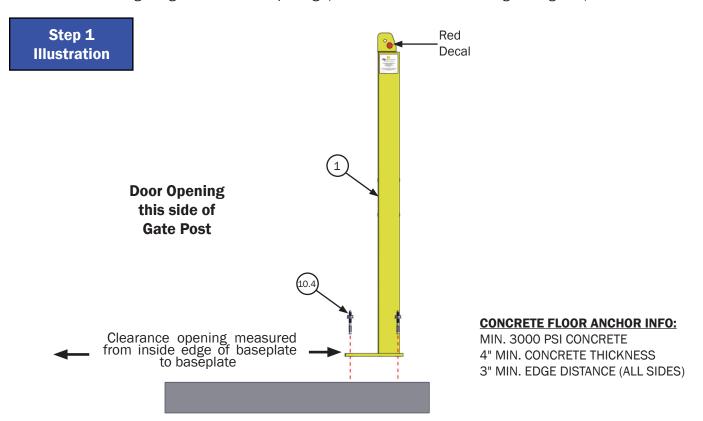

LDSG Size Reference Table									
NOMINAL OPENING CLEAR OPENING CLEARANCE HE									
LDSG-120-PCY*	96" - 120"	108",120", OR 132"	154 <sup>1</sup> / <sub>4</sub> " - 178 <sup>1</sup> / <sub>4</sub> "						
LDSG-144-PCY*	120" - 144"	132",144", OR 156"	178 <sup>1</sup> / <sub>4</sub> " - 202 <sup>1</sup> / <sub>4</sub> "						


<sup>\*</sup>LDSG-120-PCY:

- a. Adjustable from a minimum of 108" to a maximum of 132" clear opening.
- b. Gate will fit 96", 108", and 120" doors, based on a 6" offset per side
- \*LDSG-144-PCY:
  - a. Adjustable from a minimum of 132" to a maximum of 156" clear opening.
  - b. Gate will fit 120", 132", and 144" doors, based on a 6" offset per side


**IMPORTANT!** Follow Anchor Manufacturer's technical data manual/installation instructions for installation requirements and proper installation procedures.

<u>Field concrete foundation design and complete consolidation of concrete surrounding embedded item(s) anchorage points NOT by PS Safety Access.</u>

- **STEP 2.** Attach Adjustable Clevis (*red decal*) with (2) 3/8" x 4" hex bolts, (2) 3/8" nylock nuts, and (4) 3/8" flat washers.
  - a. Tighten bolts, bracket height will be adjusted later in installation steps.

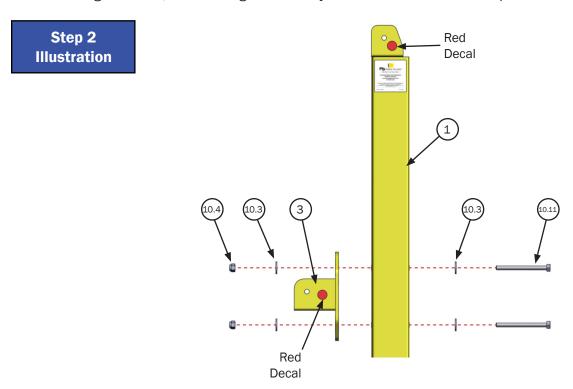


- **STEP 3.** Use rubber mallet to gently hammer flange bearings into both sides of 2" Lift Arm.
  - a. Slide 2" Lift Arm (red decal) into Adjustable Clevis (red decal).
  - b. Insert 3/8" x 3" hex bolt and tighten 3/8" nylock nut.

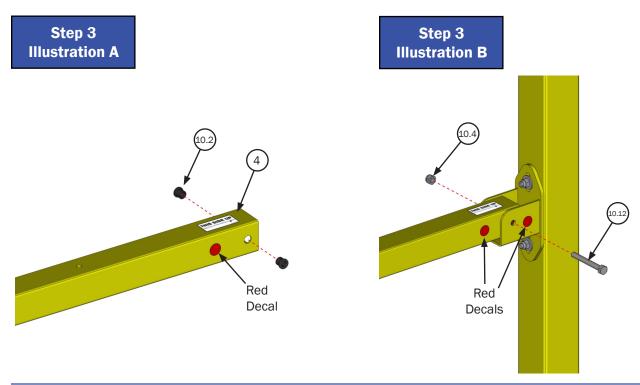


**NOTICE** The 1 <sup>3</sup>/<sub>4</sub>" Lift Arms have a series of pre-drilled holes to allow for adjustable gate width. See Size Reference Table (page 4) to determine available width adjustment.

**NOTICE** To protect the Powder Coat finish, do not slide beyond desired length.


**STEP 4.** Slide  $1 \, ^3/_4$ " Lower Lift Arm (*green decal*) into 2" Lift Arm (*red decal*) to the desired gate width. a. Insert  $^3/_8$ " x  $2 \, ^1/_4$ " hex bolts aligning with pre-drilled holes and tighten  $^3/_8$ " nylock nuts.

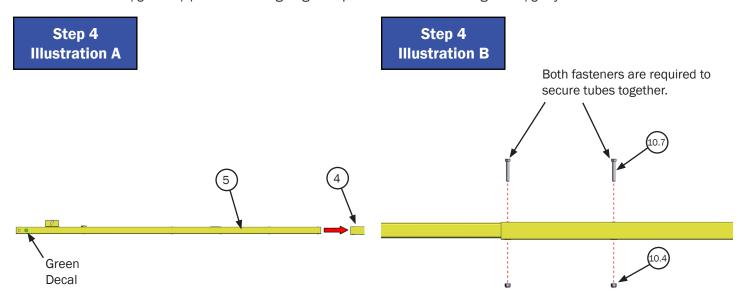

- **STEP 5.** Use rubber mallet to gently hammer flange bearings into both sides of  $1 \frac{3}{4}$ " Lower Lift Arm.
  - a. Slide the Gate End (green decal) over the 1 3/4" Lower Lift Arm (green decal).
  - b. Insert 3/8" x 2 3/4" hex bolt and tighten 3/8" nylock nut.

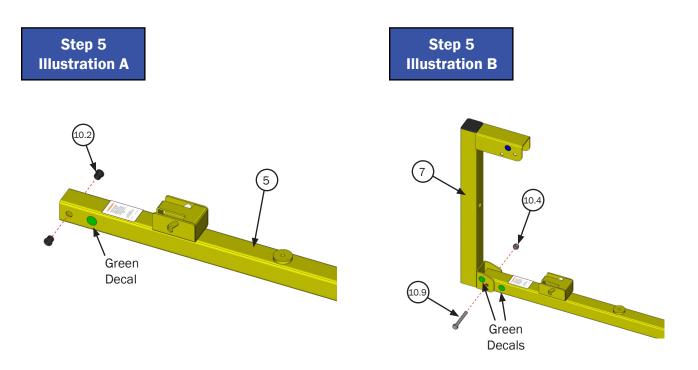


**STEP 6.** Use rubber mallet to gently hammer flange bearings into both sides of 2" Upper Lift Arm. a. Slide 2" Upper Lift Arm ( $red\ decal$ ) into Adjustable Clevis ( $red\ decal$ ) on Gate Post. b. Insert  $^3/_8$ " x 3" hex bolt and tighten  $^3/_8$ " nylock nut.

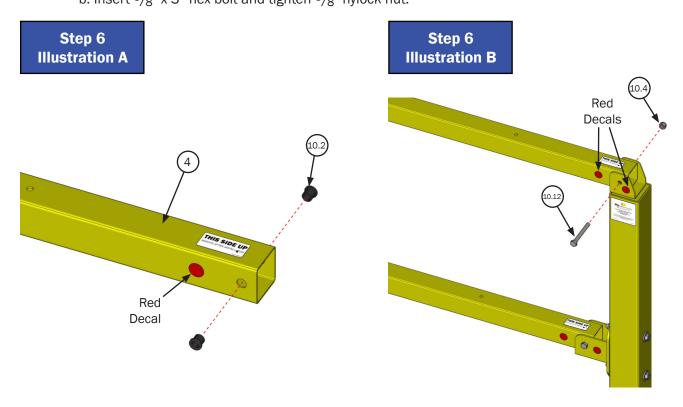


**STEP 7.** Slide  $1\,^3/_4$ " Upper Lift Arm (*blue decal*) into 2" Lift Arm (*red decal*). a. Insert  $^3/_8$ " x  $2\,^1/_4$ " hex bolts and  $^3/_8$ " nylock nuts at pre-drilled holes.

**NOTICE** To protect the Powder Coat finish, do not slide beyond desired length.

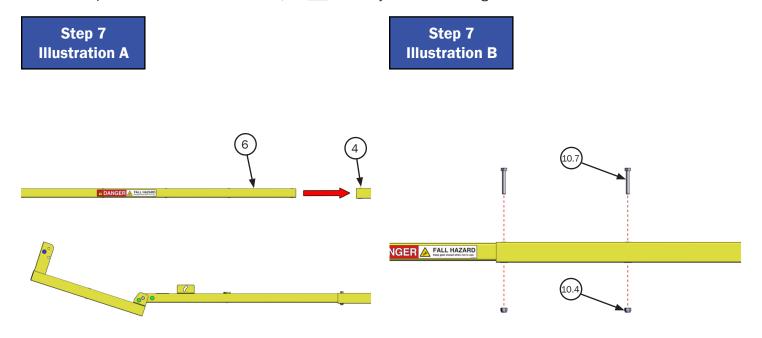

- **STEP 8.** Use rubber mallet to gently hammer flange bearings into both sides of  $1 \frac{3}{4}$ " Upper Lift Arm.
  - a. Slide the Gate End (blue decal) over the 1  $^{3}/_{4}$ " Upper Lift Arm (blue decal).
  - b. Insert 3/8" x 2 3/4" hex bolt and tighten 3/8" nylock nut.

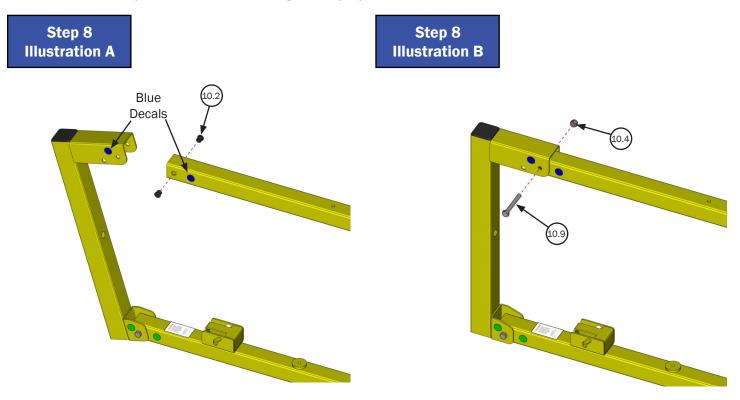


**NOTICE** Base plates are slotted to allow adjustment for alignment.

STEP 9. Mark out holes for the Gate Catch and anchor with concrete floor anchors.


Step 9
Illustration

Leave 1/4" of space between Gate End and inside of Gate Catch.

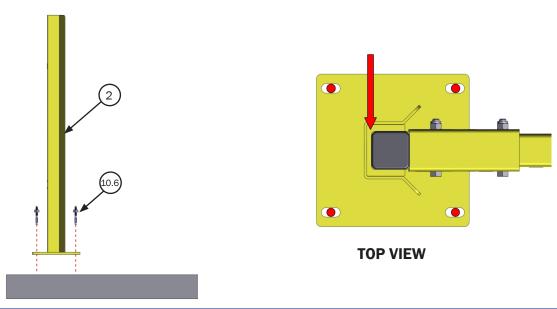

**STEP 10.** Add bumpers to Lower Lift Arms at both locations and snug with  $\frac{1}{4}$  bolts and  $\frac{1}{4}$  nylock capped nuts.

**NOTICE** Do <u>not</u> over-tighten, bumper should be snug but <u>not</u> compressed.

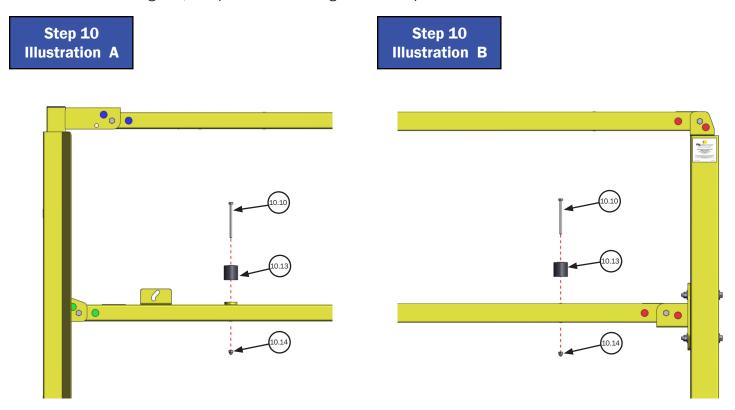


**STEP 11.** Rotate gate to the open position (gate arms vertical). Remove Gate Post from concrete floor anchors to free up the assembly, and lay on the ground in the extended position for improved access during dampener installation.

**NOTICE** To protect the Powder Coat finish, lay on cardboard.


Step 11
Illustration

Loading Dock Safety Gate Weights							
LDSG-120-PCY	98 LBS						
LDSG-144-PCY	106 LBS						

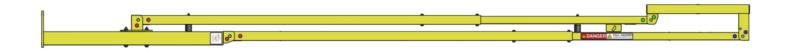


▲ **WARNING** The Loading Dock Safety Gates are heavy, verify weights, and use appropriate lifting procedures and equipment.

**STEP 12.** Install dampeners first into the Gate End (Illustration A), then into the slotted dampener bracket (Illustration B) with  $\frac{3}{8}$ " shoulder bolts.

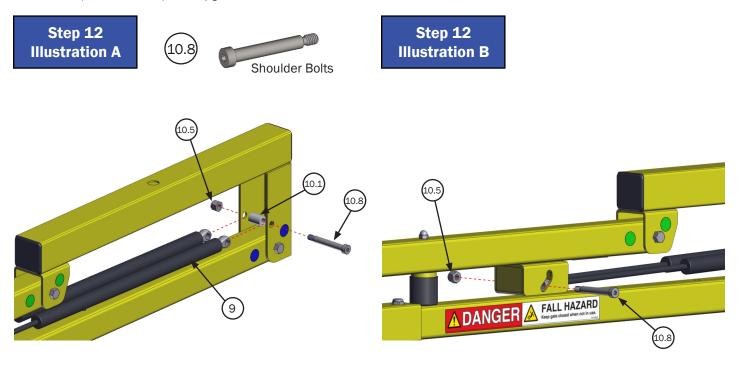


- **STEP 13.** Fully extend assembly upward, anchor Gate Post back onto the floor surface, and tip gate down into Gate Catch. As the gate approaches fully closed, you should hear a loud noise of the dampeners self-setting.
- **STEP 14.** Visually verify that the dampeners self-set into the appropriate location. If they did not, carefully tap them into place with a screwdriver. (Illustration B)


**A DANGER** Keep fingers clear of dampener pivot points, dampeners are under high pressure.

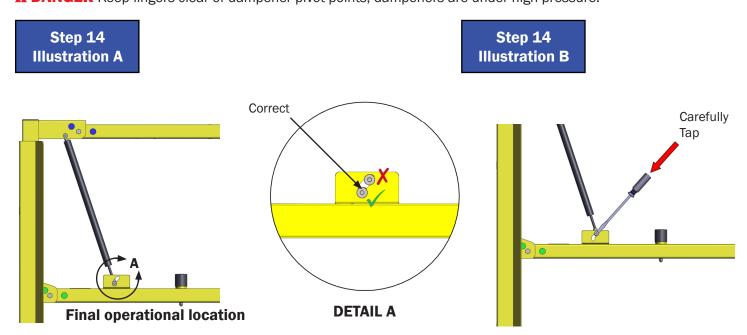

**STEP 15.** To ensure the gate opens to precisely 90°, the Adjustable Clevis needs to be set. Loosen 3/8" hex bolts and 3/8" nylock nuts in Adjustable Clevis, tip gate vertically to 90°, and re-tighten 3/8" hex bolts and nuts.

Step 15
Illustration

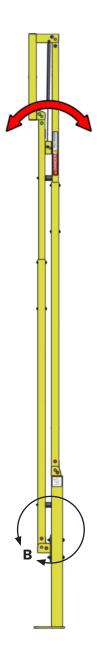

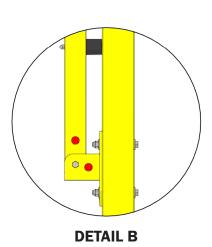

**INSTALLATION IS COMPLETE!** 

**NOTICE** If preferred, remove colored circle decals once gate is assembled.

# **Disassembling Gate Instructions**

# VII. Disassembling Gate Instructions

**NOTICE** Only complete depressurization process if disassembling Loading Dock Safety Gate.

▲ DANGER System under high pressure. Refer to depressurization instructions in Operations and Maintenance Manual before doing any maintenance on the gate.

STEP 1. Rotate gate to the open position (gate arms vertical) before proceeding with Step 2.


▲ CAUTION High internal gate forces! Before removing Gate Post baseplate fasteners, the gate must be in the open position (gate arms vertical) so the dampeners are in a non-compressed state.

**STEP 2.** Remove Gate Post from concrete floor anchors to free up the assembly and lay on the ground to enable access to the dampeners.

**STEP 3.** Use a screwdriver to gently tap alternating sides of the dampener mounting 3/8" shoulder bolt into the long portion of the slot to relieve dampener pressure from 3/8" shoulder bolts.

A DANGER Keep fingers clear of dampener ends and installation slot.

**NOTICE** To protect the Powder Coat finish, lay on cardboard.

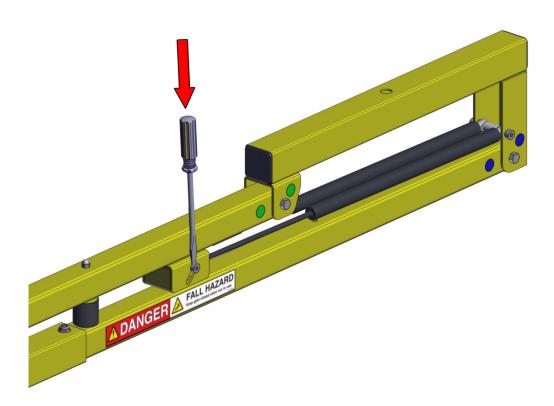


**STEP 4.** Remove  $\frac{3}{8}$  shoulder bolts at bolt ends of dampeners.

RETURN TO INSTALLATION STEPS  $\underline{12-14}$  TO INSTALL NEW DAMPENERS, AS SHOWN IN THIS OPERATIONS AND MAINTENANCE MANUAL.

# **Operation**

# **VIII. Operation**

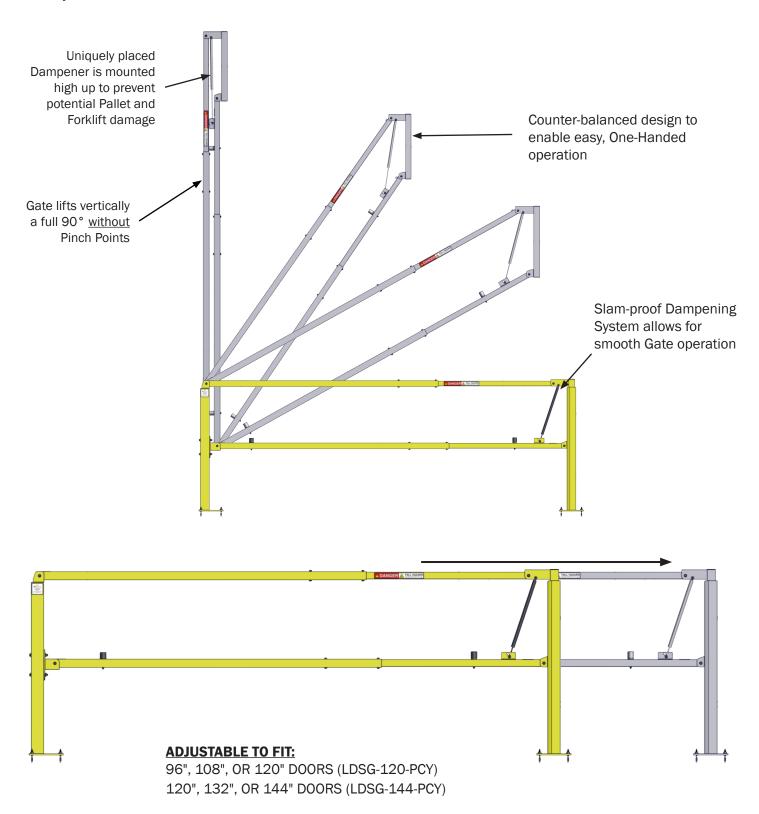


**NOTICE** For locking your Loading Dock Safety Gate in the closed position, call PS Safety Access at 877.446.1519 to order an EdgeSafe<sup>™</sup> Lockout Kit (part #514582).


# **Replacement Parts List**

# IX. Replacement Parts List

**NOTE 1.** This replacement parts list and diagram is for all EdgeSafe™ Loading Dock Safety Gate Models.

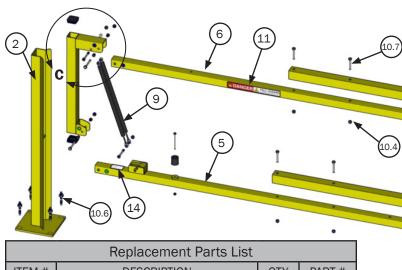

	Replacement Parts List				
ITEM #	DESCRIPTION	QTY	PART #		
1	LDSG;GATE POST PCY	1	513414		
2	LDSG;GATE CATCH PCY	1	513424		
3	LDSG;ADJ CLEVIS PCY	1	513420		
4	REFER TO HARDWARE VAR	IANT			
5	LDSG;1.75" LIFT ARM WLD PCY	1	513432		
6	LDSG;1.75" LIFT ARM PCY	1	513430		
7	LDSG;GATE END PCY	1	513437		
8	PLUG; SQ TUBE 2" OD	2	513134		
9	REFER TO HARDWARE VAR	IANT			
10	LDSG;HARDWARE BAG	1	514647		
10.1	SPACER;NYLON .425X.625X.875	1	513444		
10.2	BEARING;FLANGE .3765IDX.50300D	8	514702		
10.3	WASHER;FLAT 3/8" 16 ZN	4	501947		
10.4	NUT; NYLOCK 3/8" 16 ZN	10	501120		
10.5	NUT;NYLOCK 5/16"18 HEAVY ZN	2	513780		
10.6	ANCHOR;PWRSTUD+SD1-3/8"X3"CS	8	513454		
10.7	BOLT; HEX 3/8" 16X2 1/4 GR5ZN	4	500405		
10.8	BOLT;SHOULDER3/8"X2-1/4"	2	513779		
10.9	BOLT; HEX 3/8" 16X2 3/4 GR5ZN	2	500406		
10.10	BOLT; HEX 1/4" 20X3 1/2 GR5ZN	2	502651		
10.11	BOLT;HEX3/8"16X4 GR5ZN	2	502859		
10.12	BOLT; HEX 3/8" 16X 3GR5ZN	2	500411		
10.13	BUMPER;ROUND 1-1/2"DIAX1-1/2	2	513133		
10.14	NUT;NYLOCK 1/4"20 ZN NYL CAP	2	514472		
11	DECAL;LDSG, SG, & MG DANGER	2	513488		
12	DECAL;LDSG MARKETING	2	513489		
13	DECAL;LDSG THIS SIDE UP	2	513490		
14	LDSG; WARNING LABEL	1	513745		

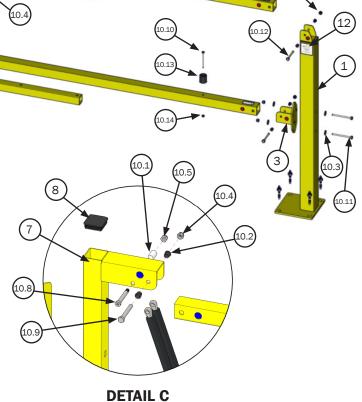

For EdgeSafe™ Lockout Kit order (part #514582.) Kit includes (1)Storage Bracket, (1)Lock Pin, (2)Bolts, (2) Nylock Nuts, and Installation Instructions.

**FINISH OPTIONS** 

Powder Coat Safety Yellow

# TO ORDER PARTS CONTACT PS SAFETY ACCESS AT 877.446.1519 or 4psinfo@psindustries.com

Hardware Variant for LDSG-120-PCY									
ITEM #	DESCRIPTION	QTY	PART #						
4	LDSG;2" LIFT ARM10' PCY	2	513428						
9	LDSG;DAMPENER 10 W/CLEVIS ENDS	2	513462						


Hardware Variant for LDSG-144-PCY								
ITEM #	DESCRIPTION	QTY	PART #					
4	LDSG;2" LIFT ARM12' PCY	2	513726					
9	LDSG;DAMPENER 12 W/CLEVIS ENDS	2	513718					

# **Size Reference Drawing**

# X. Loading Dock Safety Gate Size Reference Drawing

LDSG Size Reference Table									
	CLEAR OPENING	CLEARANCE HEIGHT							
LDSG-120-PCY*	96" - 120"	108",120", OR 132"	154 <sup>1</sup> / <sub>4</sub> " - 178 <sup>1</sup> / <sub>4</sub> "						
LDSG-144-PCY*	120" - 144"	132",144", OR 156"	178 <sup>1</sup> / <sub>4</sub> " - 202 <sup>1</sup> / <sub>4</sub> "						



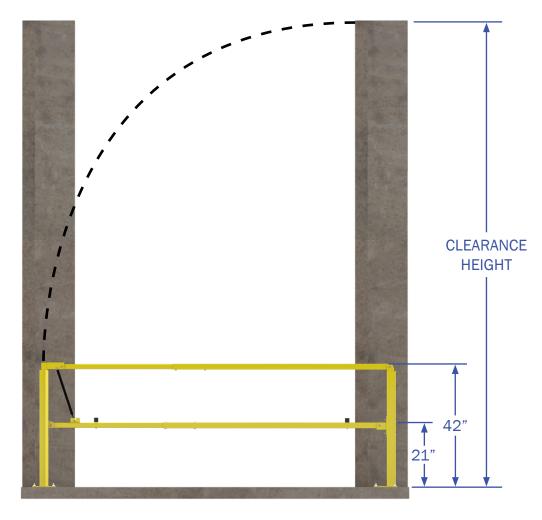

### \*LDSG-120-PCY:

- a. Adjustable from a minimum of 108" to a maximum of 132" clear opening.
- b. Gate will fit 96", 108", and 120" doors, based on a 6" offset per side  $^*\mbox{LDSG-}144\mbox{-PCY}:$ 
  - a. Adjustable from a minimum of 132" to a maximum of 156" clear opening.
  - b. Gate will fit 120", 132", and 144" doors, based on a 6" offset per side

# **Inspection and Maintenance**

# **XI. Inspection and Maintenance (Minimum Annually)**

**IMPORTANT!** Consult parts list before replacing fasteners, as all have specific design load requirements. Only use like items for replacement.

### A. Gate:

- 1. Inspect components for damage and misalignment. Adjust, repair, or replace as needed, to meet original design tolerance.
- 2. Check for proper alignment with catch. Adjust as necessary to achieve proper alignment.
- 3. Dampeners are maintenance free, replace dampener if assisting force has diminished.
- 4. Inspect bumpers for damage or wear, replace as needed.

### B. Fasteners and mechanical connections:

- 1. All fasteners must be in place and adjusted to their original design standard. Replace any damaged components.
- 2. Check all mounting connections, making sure they meet original design standards (refer to instructions).
- 3. If gate closes too quickly, fasteners at four corners of the gate can be tightened to reduce closing speed.
- 4. If gate closes too slowly, fasteners at four corners of the gate can be loosened to increase closing speed.

### C. Finishes:

- 1. Inspect and clean finishes periodically.
- 2. Touch up repair finishes, or refinish as necessary to protect the structural integrity of the Loading Dock Safety Gate.
- 3. The PCY Loading Dock Safety Gate comes with a polyester powder coat finish. Use finish materials compatible with powder coat. Follow paint manufacturers' instructions for prep and touch-up.

### D. Housekeeping:

- 1. To ensure your product continues to operate and last, upon completion of proper installation, complete the following:
  - a. Clean all surfaces.
  - b. If project is ongoing, protect installed products until final completion of project.
  - c. Touch-up, repair, or replace damaged components.
- 2. Ensure the horizontal bars are clear of debris and interferences.

# E. Labels and Placards:

- 1. Inspect all labels and placards.
- 2. Replace any labels and placards which are unreadable/missing.

**CRITICAL** Periodic Inspection and Maintenance Required. Inspect at minimum annually.

# **Inspection and Maintenance Log**

			CORRECTED BY (Print & Sign)									
Opening Identifier/ Number:	in:	CORRECTIVE ACTION										
	Locati	INSPECTION ITEMS NOTED										
			INSPECTED BY (Print & Sign)									
Product:	Model Number: _	Serial Number:	DATE INSPECTED									

Date Installed:

**CRITICAL** Periodic Inspection and Maintenance Required. Inspect at minimum annually. CORRECTED BY (Print & Sign) **CORRECTIVE ACTION** Opening Identifier/ Number: Location: **INSPECTION ITEMS** NOTED Inspection and Maintenance Log **INSPECTED BY** (Print & Sign) Model Number: Serial Number: Date Installed: INSPECTED DATE Product:

# PS INDUSTRIES® INCORPORATED - LIMITED WARRANTY

Limited Warranty: Subject to the terms of this Limited Warranty, PS Industries® Incorporated warrants to the original user or consumer (the "Owner") of a PS Industries product (the "Product") that, for a period of one (1) year from date of shipment, the Product will be free from defects in material and workmanship under normal use and service, and provided the Product is installed, operated and maintained in accordance with instructions supplied by PS Industries. The terms and limitations of this Limited Warranty apply to all repaired or replacement Products for a term equal to the balance of the warranty remaining on the Product that was repaired or replaced as of the date of such repair or replacement. Register online at: www.psindustries.com/contact/register-your-product

PS Flood Barriers™ Product Warranty Registration: For PS Flood Barriers™ Products, this Limited Warranty will only be valid if the Owner completes the Warranty Registration Form provided within thirty (30) days of Product installation. To request a copy of the Warranty Registration Form, contact PS Industries Incorporated, 1150 S. 48th Street, Grand Forks, ND 58201, phone 877-446-1519, email: 4psinfo@psindustries.com. Register online at: www.psindustries.com/contact/register-your-product/ Additional Warranty Registration Forms can be downloaded at www.psfloodbarriers.com/download-center/

Warranty Exclusions: Notwithstanding anything to the contrary, this Limited Warranty does not cover any of the following:

- 1. Normal wear and tear (including, but not limited to, normal wear and tear to gaskets and weather seals); damage or accidents resulting from freight damage, from failure to follow precautionary safety measures, or applied paint failure; abuse, misuse or unauthorized modification of the Product; misapplication; improper installation; or any defects, damage or other harm that is not the result of the acts or omissions of PS Industries.
- 2. Cost of field labor or other charges incurred by Owner in removing and/or re-affixing the Product or any part or component thereof.
- 3. Transportation costs.

Unauthorized modification of or to the Product voids this Limited Warranty. Authorized modifications, received in writing from PS Industries, as long as the modification is accomplished in strict accordance with PS Industries' instructions, does not void warranty. To request product modifications contact PS Industries, 1150 S. 48th Street, Grand Forks, ND 58201, phone 877-446-1519, email: 4psinfo@psindustries.com.

Claim Procedure: To make a claim under this Limited Warranty, the claim must be received by PS Industries before the expiration of the above stated Limited Warranty period together with proof of purchase. Contact PS Industries at the address shown below.

PS Industries Incorporated Toll Free: 877-446-1519
Attention: Warranty Phone: 701-746-4519
1150 S. 48th Street Fax: 701-746-8340

Grand Forks, ND 58201 E-mail: 4psinfo@psindustries.com

An authorized PS Industries representative must be given a reasonable opportunity to inspect and investigate the alleged Product defect prior to any work being done that affects the Product or its installation. PS Industries reserves the right to charge reasonable amounts for travel and labor associated with investigation of claims. PS Industries may also require photographs of the alleged Product defect or return of the Product or part to a designated PS Industries location, freight prepaid. A return goods authorization must be received prior to the return of the Product or part. Please contact PS Industries to determine the designated location for return and to obtain the return material authorization.

**Exclusive Remedy:** In the event of a warranty claim that PS Industries determines to be covered by this Limited Warranty, PS Industries will replace or repair, at PS Industries' discretion, the Product or any part of the Product found to be defective.

Disclaimers: The above warranty and remedy is the sole express warranty and remedy given by PS Industries on its Product. No warranties or representations at any time made by any representative from PS Industries shall vary or expand the provisions hereof. TO THE EXTENT PERMITTED BY LAW, ALL EXPRESS AND IMPLIED WARRANTIES (INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT) OTHER THAN THE EXPRESS LIMITED WARRANTY SET FORTH ABOVE ARE EXPRESSLY DISCLAIMED. UPON THE EXPIRATION OF THE ABOVE STATED LIMITED WARRANTY PERIOD, ANY AND ALL APPLICABLE IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT, ARE DISCLAIMED. SOME STATES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO OWNER.

LIABILITY LIMITATION: In no event will PS Industries' liability to Owner or any other person or entity exceed the price paid to PS Industries for the defective Product. IN NO EVENT SHALL PS INDUSTRIES BE LIABLE TO OWNER OR ANY OTHER PERSON OR ENTITY FOR INCIDENTAL, CONSEQUENTIAL, INDIRECT OR SPECIAL DAMAGES OF ANY DESCRIPTION, WHETHER ARISING OUT OF WARRANTY (INCLUDING ANY IMPLIED WARRANTIES) OR ANY OTHER CONTRACT, STRICT LIABILITY, NEGLIGENCE OR OTHER TORT, OR OTHERWISE, INCLUDING ARISING FROM INSPECTION OR REMEDY DELAYS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION AND EXCLUSION MAY NOT APPLY TO OWNER.

THIS WARRANTY GIVES OWNER SPECIFIC LEGAL RIGHTS AND OWNER MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Rev. 102119









# 877.446.1519

4psinfo@psindustries.com | pssafetyaccess.com 1150 South 48th Street | Grand Forks, ND 58201

Product Registration: psindustries.com/contact/register-your-product